


ZIP SHEATHING SYSTEM - TAPED

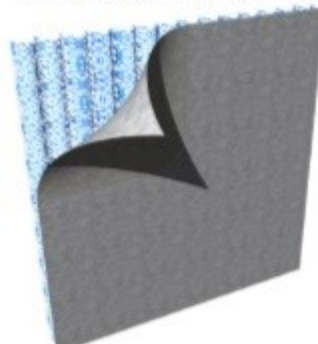


mortairvent
RAINSCREEN FOR
WOOD, STONE, FIBER CEMENT,
STUCCO OR BRICK SIDING

BEGIN INSTALLATION AT BOTTOM OF
WALL, FROM RIGHT TO LEFT.
TURN UP 4" LAP SECTION TO FORM
INSECT BARRIER AT BASE

WOOD SIDING

4" FABRIC LAP TURNED UP TO FORM
INSECT BARRIER



COP-R-SHIELD
COPPER FLASHING
AT SILL / FOUNDATION INTERFACE

ADVANCED
Building Products, Inc.